

CINEMA 12 MAIN ZONE REMOTE HANDSET IR CODES

All codes - to Philips RC-5 standard

18/03/2011

KEY PRINTING	FUNCTION	SYSTEM	COMMAND	NOTES
POWER ON	POWER ON	0x13	0x0C	
POWER OFF	POWER OFF	0x13	0x0B	
AM	RADIO AM BAND	0x13	0x14	
FM	RADIO FM BAND	0x13	0x0E	
HD AM	RADIO AM BAND	0x13	0x01	
HD FM	RADIO FM BAND	0x13	0x02	
TUNER SCAN	RADIO SCANNING UP	0x13	0x3F	
RADIO MEMORY	SAVE RADIO STATIONS	0x13	0x37	
TUNER SEEK RIGHT	RADIO TUNING UP	0x13	0x2F	
TUNER SEEK LEFT	RADIO TUNING DOWN	0x13	0x27	
1	NUMBER KEY PAD 1	0x13	0x3C	
2	NUMBER KEY PAD 2	0x13	0x3D	
3	NUMBER KEY PAD 3	0x13	0x3E	
4	NUMBER KEY PAD 4	0x13	0x34	
5	NUMBER KEY PAD 5	0x13	0x35	
6	NUMBER KEY PAD 6	0x13	0x36	
7	NUMBER KEY PAD 7	0x13	0x2C	
8	NUMBER KEY PAD 8	0x13	0x2D	
9	NUMBER KEY PAD 9	0x13	0x2E	
0	NUMBER KEY PAD 0	0x13	0x24	
TEXT DISPLAY	HD RADIO TEXT DISPLAY	0x13	0x12	
FM MODE	FM STEREO OR MONO	0x13	0x26	
MENU	SET UP MENU	0x13	0x0D	
EQ	EQUALIZER ON/OFF	0x13	0x0F	
BRIGHT	VFD BRIGHTNESS	0x13	0x16	
AUTO SETUP	AUTO RUNNING SETUP	0x13	0x31	
LATE	LATE NIGHT (Dolby Digital)	0x13	0x19	
UP	NAVIGATION UP	0x13	0x23	
DOWN	NAVIGATION DOWN	0x13	0x21	
LEFT	NAVIGATION LEFT	0x13	0x32	
RIGHT	NAVIGATION RIGHT	0x13	0x2A	
OK	NAVIGATION OK	0x13	0x22	
MUTE	AUDIO OUTPUT MUTING	0x13	0x39	
VOLUME +	VOLUME UP	0x13	0x10	
VOLUME -	VOLUME DOWN	0x13	0x11	
PL IIx	DOLBY PL IIx	0x13	0x04	
SUR.MODE	SURROUND MODE	0x13	0x20	
NEO:6	DTS NEO SUR. MODE	0x13	0x09	
CES 7.1	7.1 SURROUND MODE	0x13	0x06	
7.1 IN	7.1 CH ANALOG INPUT	0x13	0x15	
INPUT SEEK	NEXT INPUT AUTO DETECT	0x13	0x03	
1	INPUT 1	0x13	0x1A	
2	INPUT 2	0x13	0x1B	
3	INPUT 3	0x13	0x1C	
4	INPUT 4	0x13	0x1D	
5	INPUT 5	0x13	0x1E	
6	INPUT 6	0x13	0x1F	
7	INPUT 7	0x13	0x18	
8	INPUT 8	0x13	0x05	
HDMI 1	HDMI 1 INPUT	0x13	0x07	
HDMI 2	HDMI 2 INPUT	0x13	0x08	

HDMI 3	HDMI 3 INPUT	0x12	0x32
HDMI 4	HDMI 4 INPUT	0x12	0x33
TV SOUND 1	TV SOUND RETURN FOR HDMI 1	0x12	0x38
LP-MEMORY 1	LISTENING MEMORY 1	0x12	0x24
LP-MEMORY 2	LISTENING MEMORY 2	0x12	0x25
CHANNEL +	RADIO MEMORY CH +	0x12	0x26
CHANNEL -	RADIO MEMORY CH -	0x12	0x27

CINEMA 12
2nd ZONE REMOTE HANDSET IR CODES

KEY PRINTING	FUNCTION	SYSTEM	COMMAND	NOTES
POWER ON	POWER ON	0x12	0x02	
POWER OFF	POWER OFF	0x12	0x00	
AM	RADIO AM BAND	0x12	0x09	
FM	RADIO FM BAND	0x12	0x0B	
HD AM	HD RADIO FM BAND	0x12	0x03	
HD FM	HD RADIO FM BAND	0x12	0x04	
PRE SET >	PRE SET STATIONS UP	0x12	0x0A	
< PRE SET	PRE SET STATIONS DOWN	0x12	0x08	
MUTE	ZONE 2 AUDIO OUT MUTE	0x12	0x1B	
VOLUME -	ZONE 2 VOLUME DOWN	0x12	0x10	
VOLUME +	ZONE 2 VOLUME UP	0x12	0x13	
7.1 IN	7.1CH INPUT (ZONE 2 OUT)	0x12	0x18	
1	INPUT 1 (ZONE 2 OUT USE)	0x12	0x20	
2	INPUT 2 (ZONE 2 OUT USE)	0x12	0x21	
3	INPUT 3 (ZONE 2 OUT USE)	0x12	0x22	
4	INPUT 4 (ZONE 2 OUT USE)	0x12	0x23	
5	INPUT 5 (ZONE 2 OUT USE)	0x12	0x28	
6	INPUT 6 (ZONE 2 OUT USE)	0x12	0x29	
7	INPUT 7 (ZONE 2 OUT USE)	0x12	0x2A	
8	INPUT 8 (ZONE 2 OUT USE)	0x12	0x2B	
HDMI 1/3	HDMI 1/3 IN (ZONE 2 OUT USE)	0x12	0x05	
HDMI 2/4	HDMI 2/4 IN (ZONE 2 OUT USE)	0x12	0x06	

