

## CARY CD303/300 IR Remote Codes

November 30, 2004

All codes - to Philips RC-5 standard

Key Printing	Function	System	Command	Notes
OPEN/CLOSE	TRAY OPEN / CLOSE	0x04	0x2D	
POWER	POWER ON / OFF	0x04	0x0C	
POWER ON	POWER ON	0x04	0x17	
POWER OFF	POWER OFF	0x04	0x18	
STOP	STOP	0x04	0x1F	
PAUSE	PAUSE	0x04	0x2A	
PLAY	PLAY	0x04	0x2A	
MUTE	MUTE	0x04	0x36	
SRC	UPSAMPLING	0x04	0x21	
BRIGHT	BRIGHT	0x04	0x29	
TUBE	TUBE	0x04	0x28	
PREVIOUS	PREVIOUS	0x04	0x11	
NEXT	NEXT	0x04	0x10	
REW	REVERSE	0x04	0x27	
FF	FORWARD	0x04	0x26	
1	NUMBER KEY PAD 1	0x04	0x0E	
2	NUMBER KEY PAD 2	0x04	0x0B	
3	NUMBER KEY PAD 3	0x04	0x1E	
4	NUMBER KEY PAD 4	0x04	0x01	
5	NUMBER KEY PAD 5	0x04	0x02	
6	NUMBER KEY PAD 6	0x04	0x03	
7	NUMBER KEY PAD 7	0x04	0x04	
8	NUMBER KEY PAD 8	0x04	0x05	
9	NUMBER KEY PAD 9	0x04	0x06	
0	NUMBER KEY PAD 0	0x04	0x08	
+10	NUMBER KEY PAD +10	0x04	0x07	
REPEAT	REPEAT	0x04	0x3E	
DELETE	DELETE	0x04	0x0F	
PROGRAM	PROGRAM	0x04	0x0A	
TIME	TIME	0x04	0x3C	
CLEAN	CLEAN	0x04	0x09	
VOLUME -	VOLUME DOWN	0x04	0x25	
VOLUME +	VOLUME UP	0x04	0x20	
<b>AMPLIFIER USE ONLY</b>				
POWER	POWER ON/OFF	0x04	0x24	
MUTE	MUTE	0x04	0x1D	
INPUT SELECTOR <	INPUT -	0x04	0x31	
INPUT SELECTOR >	INPUT +	0x04	0x33	
BALANCE L	BALANCE LEFT	0x04	0x3D	
BALANCE R	BALANCE RIGHT	0x04	0x38	
VOLUME -	VOLUME DOWN	0x04	0x0D	
VOLUME +	VOLUME UP	0x04	0x2C	