

CARY CD303/200 IR Remote Codes

September 28, 2005

All codes - to Philips RC-5 standard

Key Printing	Function	System	Command	Notes
OPEN/CLOSE	TRAY OPEN / CLOSE	00	0EH	
POWER	POWER ON / OFF	00	0CH	
STOP	STOP	00	13H	
PAUSE	PAUSE	00	16H	
PLAY	PLAY	00	17H	H
MUTE	MUTE	00	10H	
PREVIOUS	PREVIOUS	00	15H	
NEXT	NEXT	00	14H	
REW	REVERSE	00	11H	
FF	FORWARD	00	12H	
1	NUMBER KEY PAD 1	00	01H	
2	NUMBER KEY PAD 2	00	02H	
3	NUMBER KEY PAD 3	00	03H	
4	NUMBER KEY PAD 4	00	04H	
5	NUMBER KEY PAD 5	00	05H	
6	NUMBER KEY PAD 6	00	06H	
7	NUMBER KEY PAD 7	00	07H	
8	NUMBER KEY PAD 8	00	08H	
9	NUMBER KEY PAD 9	00	09H	
0	NUMBER KEY PAD 0	00	0AH	
+10	NUMBER KEY PAD +10	00	00H	
REPEAT	REPEAT	00	0DH	
DELETE	DELETE	08	0DH	
PROGRAM	PROGRAM	08	0EH	
TIME	TIME	08	10H	
CLEAN	CLEAN	00	0FH	
CD/COAXIAL	INPUT SELECT	08	17H	
96kHz/24Bit	96kHz/24bit UPSAMPLING	08	13H	
VOLUME UP	VOLUME UP	08	0FH	
VOLUME DOWN	VOLUME DOWN	08	00H	