

CARY CD306/200 IR Remote Codes

September 28, 2005

All codes - to Philips RC-5 standard

Key Printing	Function	System	Command	Notes
OPEN/CLOSE	TRAY OPEN / CLOSE	00	0EH	
POWER	POWER ON / OFF	00	0CH	
STOP	STOP	00	13H	
PAUSE	PAUSE	00	16H	
PLAY	PLAY	00	17H	
MUTE	MUTE	00	10H	
PREVIOUS	PREVIOUS	00	15H	
NEXT	NEXT	00	14H	
REW	REVERSE	00	11H	
FF	FORWARD	00	12H	
1	NUMBER KEY PAD 1	00	01H	
2	NUMBER KEY PAD 2	00	02H	
3	NUMBER KEY PAD 3	00	03H	
4	NUMBER KEY PAD 4	00	04H	
5	NUMBER KEY PAD 5	00	05H	
6	NUMBER KEY PAD 6	00	06H	
7	NUMBER KEY PAD 7	00	07H	
8	NUMBER KEY PAD 8	00	08H	
9	NUMBER KEY PAD 9	00	09H	
0	NUMBER KEY PAD 0	00	0AH	
+10	NUMBER KEY PAD +10	00	00H	
REPEAT	REPEAT	00	0DH	
DELETE	DELETE	08	0DH	
PROGRAM	PROGRAM	08	0EH	
TIME	TIME	08	10H	
CLEAN	CLEAN	00	0FH	
AES/EBU	AES/EBU INPUT	08	14H	
COAXIAL	COAXIAL INPUT	08	11H	
TOSLINK	TOSLINK INPUT	08	12H	
CD	CD	08	15H	
DIGITAL	96kHz/24bit UPSAMPLING	08	13H	
ANALOG	192kHz/24bit UPSAMPLING	08	17H	