

## CARY CD306 IR Remote Codes

September 28, 2005

All codes - to Philips RC-5 standard

Key Printing	Function	System	Command	Notes
OPEN/CLOSE	TRAY OPEN / CLOSE	00	0DH	
POWER	POWER ON / OFF	00	0CH	
STOP	STOP	00	55H	
PAUSE	PAUSE	00	50H	
PLAY	PLAY	00	56H	
MUTE	MUTE	00	51H	
PREVIOUS	PREVIOUS	00	11H	
NEXT	NEXT	00	10H	
REW	REVERSE	00	21H	
FF	FORWARD	00	20H	
1	NUMBER KEY PAD 1	00	01H	
2	NUMBER KEY PAD 2	00	02H	
3	NUMBER KEY PAD 3	00	03H	
4	NUMBER KEY PAD 4	00	04H	
5	NUMBER KEY PAD 5	00	05H	
6	NUMBER KEY PAD 6	00	06H	
7	NUMBER KEY PAD 7	00	07H	
8	NUMBER KEY PAD 8	00	08H	
9	NUMBER KEY PAD 9	00	09H	
0	NUMBER KEY PAD 0	00	0AH	
+10	NUMBER KEY PAD +10	00	00H	
REPEAT	REPEAT	00	24H	
DELETE	DELETE	00	0EH	
PROGRAM	PROGRAM	00	38H	
TIME	TIME	00	26H	
CLEAN	CLEAN	00	0FH	
AES/EBU	AES/EBU INPUT	00	0BH	
COAXIAL	COAXIAL INPUT	00	57H	
TOSLINK	TOSLINK INPUT	00	58H	
CD	CD	00	2DH	
DIGITAL	96kHz/24bit UPSAMPLING	00	2BH	
ANALOG	96kHz/24bit UPSAMPLING	00	29H	