

CARY DVD 7 IR Remote Codes

March 23, 2006

All codes - to Philips RC-5 standard

Key Printing	Function	System	Command	Notes
OPEN/CLOSE	TRAY OPEN / CLOSE	23	1	
POWER	POWER ON / OFF	23	0	
1	NUMBER KEY PAD 1	23	2	
2	NUMBER KEY PAD 2	23	3	
3	NUMBER KEY PAD 3	23	4	
4	NUMBER KEY PAD 4	23	5	
5	NUMBER KEY PAD 5	23	6	
6	NUMBER KEY PAD 6	23	7	
7	NUMBER KEY PAD 7	23	8	
8	NUMBER KEY PAD 8	23	9	
9	NUMBER KEY PAD 9	23	10	
GOTO	GOTO	23	11	
0	NUMBER KEY PAD 0	23	12	
+10	NUMBER KEY PAD +10	23	13	
ANGLE	DVD ANGLE	23	14	
SUB-TITLE	DVD SUB-TITLE	23	15	
AUDIO	DVD AUDIO	23	16	
SETUP MENU	SETUP MENU	23	17	
UP	NAVIGATION UP	23	18	
MENU	DVD MENU	23	19	
LIFT	NAVIGATION LIFT	23	20	
ENTER	NAVIGATION ENTER	23	21	
RIGHT	NAVIGATION RIGHT	23	22	
ON SCREEN	DVD ON SCREEN DISPLAY	23	23	
DOWN	NAVIGATION DOWN	23	24	
TITLE	DVD TITLE	23	25	
STOP	STOP	23	26	
PAUSE	PAUSE	23	27	
PLAY	PLAY	23	28	
PREVIOUS	PREVIOUS	23	29	
NEXT	NEXT	23	30	
REW	REVERSE	23	31	
FF	FORWARD	23	32	
ZOOM -	ZOOM DOWN	23	33	
ZOOM +	ZOOM UP	23	34	
VOLUME -	VOLUME DOWN	23	35	
VOLUME +	VOLUME UP	23	36	