CAD - 80 MK-II

OPERATING MANUAL

NOTE:

Before installing your new SLI -50, please read this manual carefully as it will inform you of the CAD-80 MK-II's specifications, proper installation procedures and operation procedures. Also included in this manual are guidelines on how to properly service and care for your new CAD-80 MK-II.

CAD - 80 MK-II

INTEGRATED STEREO AMPLIFIER

Congratulations! You have purchased one of the most exotic integrated stereo audio amplifiers available. Within its power range, the CAD-80 MK-II displays the operating characteristics of a true "high-end" amplifier. Careful design, parts selection and proper circuit topologies contribute to incredible reliability and enjoyment.

For the technically minded, a review of the circuit is in order. Your new CAD-80 MK-II operates in a class AB mode utilizing(fixed negative) cathode self-biasing on the KT88 output tubes. The KT88 output tubes are operating in a push-pull configuration utilizing the simple but effective system of a pentode screen DC voltage circuit. This conventional pentode output configuration provides greater sensitivity, extremely low distortion and improved transient response. The output transformers in your CAD-80 MK-II is the most important component in the amplifier and has been specifically designed by Cary Audio for use in the CAD-80 MK-II. The phase inverter is a selfbalancing split load configuration utilizing the 6SN7 octal base dual triode. The preamplifier circuit is a resistive coupled class A triode voltage amplification stage. The power supply in the CAD-80 MK-II features a 200% duty cycle EI laminate power transformer. The high voltage section features full wave vacuum tube (CV-729/5U4) rectification (not cheap voltage doubler's used in many amplifiers) to a PI-L capacitive network. To avoid AC hum, the input 12AU7 tubes and the 6SN7 phase inverter have DC filament voltage. This will prevent electrodes in the gain stages. The input signal from the volume control is direct coupled (DC) to the first grid of the 12AU7. There are no coupling capacitors in line with the input signal on the CAD-80 MK-II. The sub-woofer output is derived from a voltage divider network on the input stage of the CAD-80 MK-II.

A great deal of attention during design of your new CAD-80 MK-II was concentrated on the "overload recovery" ability of the amplifier. The ability of an amplifier to instantly recover from clipping is much more important than is commonly believed. In the power war of amplifier manufactures the mentality is focused on high and then even higher power output to solve the clipping problem.

When in reality the most critical aspect is how fast a recovery an amplifier can achieve after overload. With the incredible dynamic range of live and in turn recorded music even 2000 watts of power is not enough power. Most of the music being listened to in an average listening room is only requiring about 3 watts of power. It is on the transients of loud low frequency program material that tremendous signal voltages will appear at the input of the amplifier. It is in this situation that the overload recovery ability of an amplifier is of critical concern. The CAD-80 MK-II will overload symmetrically at any frequency in the audio band-pass. The CAD-80 MK-II will also yield faithful reproduction of extremely low frequencies at full output levels. Power transformer, power supply regulation and output transformer design and careful shaping of the overall frequency response curve all play a very important part in the ability of the CAD-80 MK-II to recover quickly when overloaded. The high voltage rail will fluctuate no more than a volt between soft and loud passages.

Another technical feature of your new CAD-80 MK-II, aside from how compact and gorgeous it looks, is the delightful, sensual beauty of the music it recreates. The first thing that will strike you about your new CAD-80 MK-II integrated amplifier is the incredible transparency and resolution of detail in the music. The CAD-80 MK-II's sensual nature is best revealed in the sense of life it displays in female vocalists.

Your new Cary CAD-80 MK-II integrated presents music with such presence and directness, you'll be drawn into the music hour after musically satisfying hour. This is the result of circuit techniques, which eliminate any discernible crossover notch at low levels, and also contributes to the freedom from listening fatigue. The CAD-80 MK-II will draw you in even further as you realize how lucid and utterly uncolored neutrality reveals delicate nuances in the sound stage.

Enjoy the music and of course please read this complete manual for a complete understanding of trouble free operation.

SPECIFICATIONS

Operating the CAD-80 MK-II stereo integrated amplifier is a simple procedure, since each unit is designed for long term stability in virtually any home operating situation. Therefore, if the unit is operated outside the parameters outlined in this owner's manual, damage may result. Please read this manual carefully before putting your new Cary Audio Design CAD-80 MK-II in operation. The following definitions are applicable to this manual. These definitions must be followed explicitly.

WARNING HAZARD PRESENTS PERSONAL INJURY OR DEATH

Caution

EQUIPMENT DAMAGE MAY OCCUR BUT NOT PERSONAL INJURY

Note

Proper performance of the amplifier cannot be ensured if disregarded

1.2 Specifications

The following section describes the CAD-80 MK-II basic specifications. Specs are subject to change without notice or obligation.

DIMENSIONS: 7"H x 17"W x 16"D

WEIGHT: 42 lb...

CIRCUIT TYPE: Push-Pull Ultralinear Amplification in Pure Class AB

POWER OUTPUT: 30 Watts Triode, 50 Watts Ultra-Linear (Available with internal

wiring change).

INPUT SENSITIVITY: .45 volts for full output

INPUT IMPEDANCE: 100,000 ohms

NOISE AND HUM: 82db below rated output

FREQUENCY RESPONSE (at full power output): 19Hz to 23Khz +/- .5db

TUBES: 2-12AU7 Input Buffer Preamp

2-6SN7 Pre-Driver/Phase Inverter

4- KT88 Output tubes 2- CV729/SU4 Rectifiers

POWER TRANSFORMERS: 1- EI laminated, 200% duty cycle

OUTPUT TRANSFORMERS: 2-EI laminated, Silicon Impregnated

RESISTORS: 1% metal film

CAPACITORS: Oil Filled

POWER SUPPLY CAPACITORS: 2 - 1200 MFD @ 450 volts

2 - 10 MFD @ 450 volts film & foil 1 - 10 MFD @ 630 volts film & foil

AC CORD: 3 conductor shielded detachable

AC POWER REQUIREMENTS: 117/234 volts AC 50/60Hz

POWER CONSUMPTION:

166 watts operate83 watts in stand-by

WARM-UP TIME: 3 minutes

BREAK-IN PERIOD: 100 hours of music playing time

FINISH: Chrome plated Stainless Steel Chassis

FRONT PANEL: Machined, Gold Anodized aluminum

1.3 Front Panel Features

POWER ON, STAND BY, OPERATE: Rotary switch turns on AC mains and high voltage on "in operate" position

LED: Indicates high voltage on

VOLUME: Dual precision potentiometer controlling volume of both channels

BALANCE: Dual precision potentiometer to balance between left and right channel

SELECTOR: Selection of line inputs for listening. Direct CD, AUX 1, & AUX 2 (Direct input by-passes volume and balance controls. Must use external volume control.)

1.4 Rear Apron Features

INPUTS Direct CD, AUX1, & AUX 2: Signal input connection via shielded interconnect cable

TAPE OUT: Steady level output to recorder input

SPEAKER OUTPUT: 5-way binding posts provide the output to the

speaker system. Red = +, Black = -

AC: 3- conductor shielded power detachable cord to AC power mains.

CAUTION

EQUIPMENT DAMAGE MAY OCCUR WITH IMPROPER FUSES

AC FUSE: This is an over current protection fuse for the CAD-80 MK-II.

Never replace with any other fuse than 3 AMP SLOW BLOW!

250 VOLT! (2 AMP SLOW BLOW ON 220 VAC OPERATION)

TUBE FUSE: This is a protection fuse for the output tubes. Never replace with any other fuse than a .5 amp fast blow! 250 volt.

CAUTION

NEVER REMOVE / INSERT AC LINE CORD WHEN THE UNIT IS ON

INSTALLATION

This section describes the unpacking and installation procedures for the CAD-80 MK-II amplifier.

WARNING

**MAKE NO ATTEMPT TO PUT THE CAD-80 MK-II AMPLIFIER IN SERVICE WITHOUT THE BOTTOM PLATE ATTACHED - CONTACT WITH VOLTAGE

IN THE CAD-80 MK-II CAN BE FATAL!!!!!

2.1 Unpacking

All shipping containers have been specifically designed to protect their contents and special care has been taken to prevent damage under normal shipping conditions. Mishandling should be evident upon inspection of the shipping container. If damage is found after visual inspection, take care not to destroy the evidence. If necessary, document the damage with photographs and contact the transport carrier immediately.

Carefully remove your new SLI -50 stereo integrated amplifier from its packing carton, and examine it closely for signs of shipping damage. It is recommended to save all original packing cartons to protect your amplifier from damage should you wish to store it or ship it for after-sales service.

2.2 Amplifier Placement

In general, the location of your new CAD-80 MK-II is not critical. Certain precautions must be taken to ensure optimum performance. Avoid extremely hot locations such as near radiators or other heating units. Keep the top of the CAD-80 MK-II clear of books, paper or other equipment to protect against overheating!! DO NOT place your CAD-80 MK-II in a closed book case - overheating will damage the amplifier! Allow 8 to 10 inches

above the unit for proper ventilation.

2.3 Power Requirements

The CAD-80 MK-II is designed to operate from house current mains. The design voltage is 117 VAC at 50/60Hz. (Foreign units 234 VAC at 50/60Hz.)

2.4 Cables

The speaker cables from the output posts of the CAD-80 MK-II to the speaker system can be any convenient length your set-up requires. Select speaker cables of sufficient size to preserve the outstanding performance capabilities of your CAD-80 MK-II. Heavy gauge #16 wire is suitable for distances up to 10 feet; #12 for 25 feet. Most audio dealers will have proper speaker cable in stock for this purpose.

OPERATION

Signal input connection is made via the input jacks on the rear of the CAD-80 MK-II located on the rear panel. The interconnect cables from the output of the CD player, tuner, etc. can be any convenient length your set-up requires. The choice of a high quality interconnect cable is important. Once again, your audio dealer will have the proper cables in stock for this purpose.

3.1 Operation

Your new CAD-80 MK-II is ready for operation after the speaker and interconnect cables have been installed.

3.2 AC On Stand By Power Switch

Simply turn the rotary switch to the "stand by" position. Observe that all 10 tubes are lit (filaments). After 1 to 2 minutes turn the switch to "operate". The high voltage will slowly come up and the blue LED will light and indicate the power supply is charged. Waiting 1 to 2 minutes before switching to "operate" is not absolutely necessary, but warming up the filaments before applying high voltage will extend the life of your tubes.

3.3 Stand By Switch

This is a most convenient feature on the CAD-80 MK-II amplifier. In the "operate" position, the amplifier is ready to operate. In the "stand by" position, only the tube filaments are operating. You may wish to leave your CAD-80 MK-II amp turned on in the "stand by" mode 24 hours a day. When you wish to listen to music simply turn the stand by switch to the operate position. Under these conditions the CAD-80 MK-II is always warmed up and ready for peak performance.

3.4 Break-In Period

The tubes, capacitors and output transformers take approximately 100 hours of music playing to fully settle in for peak performance. The CAD-80 MK-II will seem sterile or thin sounding right out of the box. After the first couple of hours you will notice increased depth and tighter bass. This break-in period defies all engineering theory, but is true with most audio amplifiers.

WARNING MAKE SURE AMPLIFIER IS UNPLUGGED FROM AC MAINS BEFORE SERVICING

SERVICE AND CARE

4.1 CAD-80 MK-II Care and Cleaning

The case and front of the CAD-80 MK-II may be cleaned with a soft cloth and Windex or a window cleaner. The frequency of cleaning will be governed by how many hours the CAD-80 MK-II is operated and by operating environment cleanliness. A very mild chrome polish may be used on the chrome chassis to remove what the window cleaner does not. **CAUTION!** Gently apply the polish to the chrome, otherwise you may scratch the chassis.

4.2 Tube Replacement

If it becomes necessary to replace the tubes in the SLI -50 amplifier, a matched quartet set of output tubes of the same brand should be used. A new tube kit is available from Cary Audio Design, Inc. You should get a few years or more from the output tubes with everyday usage and many, many years of use from the 12AU7 & 6SN7 input tubes.

4.3 FACTORY SERVICE

Careful consideration has been given to the design of your CAD-80 MK-II amplifier to keep maintenance problems to a minimum. However, it is possible that some problems may arise which cannot be cured by tube substitution. At this point we suggest you contact our Customer Service Department phone number (919)481-4494 to describe your problem in detail. DO NOT return the CAD-80 MK-II to the factory without a return authorization number from the Customer Service Department.

Cary Audio Design, Inc. will assume no responsibility if the transportation company refuses to pay a damage claim due to your improper packing or lack of insurance should the unit be lost or damaged in shipment.

WARNINGS

MAKE NO ATTEMPT TO PUT THE CAD-80 MK-II IN SERVICE WITH THE BOTTOM PLATE REMOVED. CONTACT WITH HIGH VOLTAGES FOUND THE BE IN UNIT CAN FATAL!! COMPLETELY REMOVE AC POWER PLUG FROM THE WALL 30 MINUTES FOR AND ALLOW THE HIGH **VOLTAGE** CAPACITORS TO DISCHARGE THROUGH BLEEDER RESISTORS BEFORE ATTEMPTING TO CHANGE TUBES OR CLEAN THE INSIDE OF THE AMPLIFIER

CAUTIONS

NEVER REMOVE / INSERT AC PLUG WHEN THE UNIT IS ON OR THE AC POWER SWITCH IS IN THE ON POSITION. OBSTRUCTION OF THE TOP PORTION OF THE CAD-80 MK-II WILL RESULT IN TUBES OVERHEATING AND DAMAGE TO THE AMPLIFIER.

!!OBSERVE DIRECTIONS IN THIS MANUAL!!

CAD-80 MK-II TROUBLESHOOTING GUIDE

SYMPTOM	CAUSE	REMEDY
Hum or "Buzzing" through speakers	-Ground Loop	-Install 2-pin adapter on AC cord to float the ground.
	-Intermittent or poor connection of interconnect ground	-Replace interconnect.
"Popping or Spitting" noise through the speaker	-Noisy tube	-If noise is in one channel, swap one section of tubes at a time until the noise swaps
		channels. Replace noisy tube. -Check bias of output tubes. If high or fluctuating rap idly, replace output tube.
AC fuse blows	-Line voltage surge	(See bias instruction sheet) -Replace fuse.
	-CV729 shorted.	-Replace CV729


CAD-80 MK-II Bias Adjustment


Bias Meter Jack







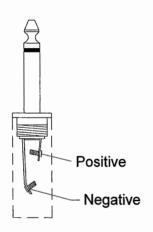

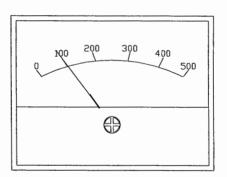

Set bias for both sides of the amplifier to 100mA

Insert meter plug into bias jack.

Adjust for 100mA reading on VOM or DC current meter.

Readjust to 100mA after CAD-80 MK-II is warmed up for 10 minutes. Remove plug and enjoy the music!

Note: Bias is factory preset; Bias should be reset when installing replacement E34L tubes.

NOTES

UNITED STATES LIMITED WARRANTY

Cary Audio Design, Inc. warrants to the original United States purchaser for use in the United States, that this product shall be free from defects in material (except tubes and AF output transistors) or workmanship for:

Models CAD-211M, SLM-200 and the CAD-805, Five (5) years from date of original purchase. Amplifiers and Preamplifiers, Three (3) years from the date of the original purchase. Digital Products, One (1) year from original date of purchase.

During the warranty period, Cary Audio Design, Inc. or an authorized Cary Audio Design, Inc. service facility will provide free of charge both parts (except tubes and AF output transistors) and labor necessary to correct defects in material or workmanship.

To obtain such warranty service, the original purchaser must:

- (1) Complete and send in the warranty Registration Card.
- (2) Notify Cary Audio Design, Inc. as soon as possible after the discovery of a possible defect:
 - (a) The model number and serial number;
 - (b) The identity of the seller and the approximate date of purchase;
 - (c) A detailed description of the problem, including details on the electrical connection in the associated equipment and the list of such equipment.
- (3) Deliver the product to Cary Audio Design, Inc. or the nearest authorized service facility, or ship the same in its original container or equivalent, fully insured and the shipping charges prepaid.

Correct maintenance, repair and use are important to obtain optimum performance from this product. Therefore, carefully read the Operating Manual. This warranty does not apply to any defect that Cary Audio Design, Inc. in its sole discretion determines is due to:

- (1) Improper maintenance or repair, including the installation of parts or accessories that does not conform to the quality and the specifications of the original parts.
- (2) Misuse, abuse, neglect or improper installation.
- (3) Accidental or incidental damage.

WARRANTY DISCLAIMER

Except for the express warranties stated herein, Cary Audio Design, Inc. disclaims all other warranties including, without limitation, all implied warranties of merchantability and fitness for a particular purpose.

EXCLUSIVE REMEDY

Notwithstanding the foregoing, the purchaser's exclusive remedy for any breach of warranty, express or implied, is limited to the repair or replacement of the defective unit or the refund of the purchase price, at the option of Cary Audio Design, Inc. Under no circumstances is Cary Audio Design, Inc. liable for incidental or consequential damages. Any implied warranties imposed by law terminate one (1) year from the date of purchase.

FOREIGN PURCHASERS

Cary Audio Design, Inc. warrants its merchandise to purchasers in the United States for use in the United States. It provides no other warranties. If you are a foreign purchaser, consult with your dealer to determine whether your dealer provides any warranty.

The foregoing constitutes Cary Audio Design Inc.'s entire obligation with respect to this product, and the original purchaser and any user or owner shall have no other claim for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to you.

This warranty gives legal rights and you may have other rights which vary from state to state.