



SLP-98

OPERATING MANUAL

NOTE:

Before installing your new SLP-98, please read this manual carefully as it will inform you of the SLP-98's specifications, proper installation and operation procedures. Also included in this manual are guidelines on how to properly service and care for your new SLP-98.

SPECIFICATIONS

When the following cautionary terms are used in this manual, these definitions apply:

WARNING: Electrical hazard! Misuse or failure to follow instructions properly may result in personal injury or death!

CAUTION: No risk of personal injury; however, misuse or failure to follow instructions may result in damage to equipment.

NOTE: No risk of personal injury or equipment damage; however, misuse or failure to follow instructions may prevent proper performance of the equipment.

1.2 Specifications

This section describes the basic specifications of the SLP-98 at the time of printing. Specifications are subject to change without notice or obligation.

DIMENSIONS: 12-1/2 W x 5" H x 12" D

WEIGHT: 22 lbs.

CIRCUIT: Class A Triode

INPUT IMPEDANCE: 47,000 ohms phono section with user option on lower resistance

OUTPUT IMPEDANCE: 800 ohms

GAIN: 1.2 millivolt input = 1 volt output phono stage = 43dB
110 millivolt input = 1 volt output line stage = 16dB

RIAA CURVE: 1,000Hz = 0dB
20Hz = +20dB
20,000Hz = 20.5dB

SIGNAL/NOISE RATIO: -88dB

RESISTORS: 1% metal film

CAPACITORS: Polystyrene and polypropylene

POWER TRANSFORMER: 200% duty cycle on all transformers enclosed in separate power pack

TUBES: 8 total premium tubes
 2-6SN7 buffer cathode followers
 2-6SN7 line stage
 2-12AX7 (ECC83) phono section
 2-12AU7 (ECC82) phono section output buffer

POWER SUPPLY: Full wave rectification, center-tapped, pi-network featuring a filter choke.

AC POWER REQUIREMENTS: 100-130 volts AC / 50-60Hz at 50 watts
 200-245 volts AC / 50-60Hz at 50 watts

WIRE: EE Teflon Silver

WARM-UP TIME: 5 minutes

INPUT AND OUTPUT JACKS: Gold plated with Teflon® insert

DUTY CYCLE: Continuous duty all modes 24 hours per day

1.3

Front Panel Features

POWER SWITCH: Rotary 3 position: off, stand-by, operate

SELECTOR: 5 Position rotary switch controlling input selection.

LEFT BLUE LED: Indicates AC power "ON"

OPERATE MUTE: Mutes output of preamplifier

TAPE MONITOR: By-passes all inputs to activate incoming tape recorder signals

RIGHT BLUE LED: Indicates SLP-98 in tape monitor function

LISTENING LEVEL: Master dual volume control equally controlling input signal to line section preamplifier

INPUT LEVEL LEFT: Individual control of left channel level feeding to master listening level volume control

INPUT LEVEL RIGHT: Individual control of right channel level feeding to master listening level volume control

1.4
Rear Apron Features

- PHONO:** These jacks are to be used with moving magnet or high output moving coil cartridges with a recommended minimum output of 1.4 millivolts
- AUX.-CD-TUNER-TAPE:** These are line level inputs requiring flat frequency response
- GND:** Ground lug for turntable chassis
- MONITOR:** For use with tape recorders that employ a third head to monitor a tape as it is being recorded (may be used as a flat frequency response line input)
- TAPE OUT:** Constant output of selected input signal for recording independent of volume control setting on SLP-98
- DUAL OUTPUTS:** 1-Connect directly to input of power amps
- AC:** Multi-conductor power cord to be plugged into SLP-98 external power pack

CAUTION
Never remove/insert AC line cord when the unit is "ON"

INSTALLATION AND UNPACKING

This section describes the unpacking and installation procedures for the SLP-98 preamplifier.

WARNING
Make no attempt to put the preamp in service
outside of the cabinet.
Contact with voltage in the SLP-98 can be fatal!!

2.1 Unpacking

All shipping containers have been specially designed to protect their contents and special care has been taken to prevent damage under normal shipping conditions. Mishandling should be evident upon inspection of the shipping container. If damage is found after visual inspection, take care not to destroy the evidence. If necessary, document the damage with photographs and contact the transport carrier immediately.

Carefully remove your new SLP-98 from its packing carton and examine it closely for signs of shipping damage. It is recommended to save all original packing cartons to protect your preamplifier from damage should you wish to store it or ship it for after-sales service.

2.2 Warranty Card

If you were the original purchaser of this unit and you purchased it in the United States, you should fill out the enclosed warranty registration card and return it to Cary Audio Design within 10 days of your purchase. Cary Audio Design also suggests that you keep your original packing cartons in case you need to ship the unit. Warranty restrictions apply. Consult the warranty section of this manual for details. **Failure to return warranty card within 10 days will limit warranty to one year.**

2.3 SLP-98 Placement

The SLP-98 is designed for use inside homes. It must be protected from the elements and temperature extremes. For example, avoid placing the unit in extremely hot locations such as near radiators or other heating units. Its location among the user's audio components is not critical; however, certain precautions must be taken.

2.4 Power Requirements

The SLP-98 is designed to operate from house current mains. The design voltage is 117 VAC at 50/60Hz (Foreign units 234 VAC at 50/60Hz).


2.5 Cables

The interconnect cables from the output jacks of the SLP-98 to the input jacks on the basic amplifiers can be any convenient length your set-up requires. The choice of a high quality interconnect cable is important. Most audio dealers will have proper speaker cable in stock for this purpose.

***** WARNING ***** (Personal injury or product damage may occur)

**Do not connect or disconnect power cable
while power pack is plugged into the wall!**

Make sure all power connections are made before power pack is connected to live voltage.

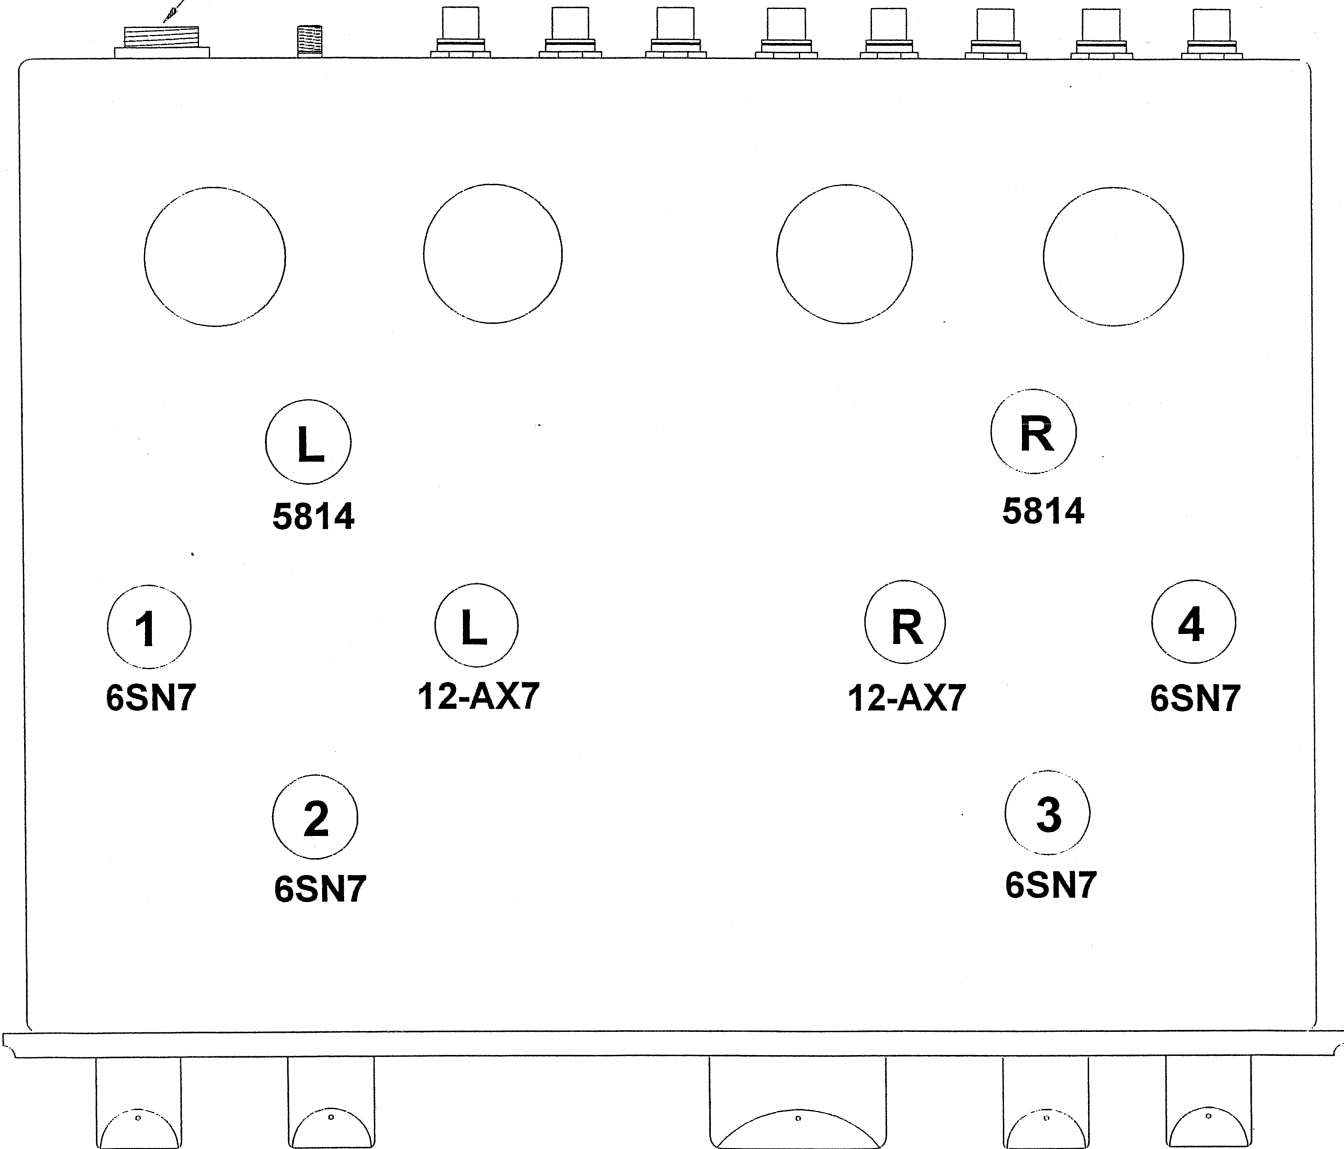

OPERATION

Your new SLP-98 is ready for operation after all the tubes and interconnect cables have been installed. The SLP-98 is provided with functional, useful front panel controls with a logical layout. The listening level is conveniently located in the center. Connect the SLP-98 to the power pack with the gray cable. Plug AC mains into the power pack and flip the power switch up. The output of the SLP-98 is inverting. Connect your speaker wire out of phase ((+) to (-) and (-) to (+)) on both channels.

3.1 Power Switch

The power switch located at the far left on the SLP-98 front panel functions in the following manner:

- “Off”** Removes all AC voltages from the SLP-98 preamp deck
- “Stand-By”** Provides DC voltage through individual regulators to flow to the filaments of the preamplifier stage. (The SLP-98 may be left in the stand-by position at all times to keep the SLP-98 in a warmed-up, ready-to operate mode without B+ potential. Operating in this fashion gives peak performance after only a few minutes of operating time.)
- “Operate”** Brings up full potential DC voltage within one minute.

3.2 Selector Switch

The 5-position rotary switch connects a choice of input program source, both channels simultaneously with proper amplification (or in the case of phono) RIAA equalization for phono input. All program sources are selected by this switch.

3.3 Operate Mode

To listen to music the operate switch must be in the "UP" position when "DOWN" the output is mute.

3.4 Monitor Tape

In the “Up” position, the rear monitor jack serves as the input source. This function is very useful with tape decks utilizing a third head to monitor the recording directly from the tape. In the “Up” position, the blue LED indicator light will appear.

3.5 Listening Level

The gain of both left and right channels is controlled simultaneously by this control. The control potentiometer is of such high quality that the tracking error is less than 0.5dB from 0 to -60dB. The program source remains in balance over the entire range of this control. The taper rate of the volume control has been chosen to provide a slow increase in gain over the first half of rotation and a more rapid gain increase above 12:00.

3.6 Input Level - Right and Left

The two potentiometers control independently the input level to each channel of the SLP-98. The input level controls on a SLP-98 take the place of an individual dual balance control used on many

preamplifiers. Also, these controls may be used to reduce the overall gain of each channel on the SLP-98.

CARE AND SERVICE

The stainless steel nickel-chrome plated chassis on the SLP-98 may be cleaned with a household window cleaner and a paper towel. If the SLP-98 has been operated in an extremely dusty or humid environment, automobile chrome polish may also be used to bring up the original luster of the chrome finish. The black front face plate may be restored to factory fresh condition by spraying and buffing utilizing with Armorall®. The tube may be cleaned with window cleaner. The frequency of cleaning will be governed by how many hours the SLP-98 is operated and by the operating environment.

4.1 Tube Replacement

If it becomes necessary to replace the tubes in the preamp the same brand should be used. A new tube kit is available from Cary Audio Design. Although tube life varies depending on the nature and degree of use, under normal operating condition for home use, the tubes in the SLP-98 should last several years and may last much longer.

4.2 Factory Service

Careful consideration has been given to the design of your SLP-98 to keep maintenance problems to a minimum; however, it is possible that some problems may arise which cannot be cured by tube substitution. At this point, we suggest that you contact our Customer Service Department at phone number (919) 481-4494 to describe your problem in detail. **Do not return the SLP-98 to the factory without a Return Authorization Number from the Customer Service Department.** Cary Audio Design will assume no responsibility if the transportation company refuses to pay damage claim due to your improper packing or lack of insurance should the unit be lost in shipment.

Non-Warranty Repairs

Cary Audio Design will provide repair service for its products charging on a time and expense basis for the repairs.

WARNINGS

**Make no attempt to put the SLP-98 in service outside of the cabinet -
Contact with high voltages found in the unit can be fatal!!!**

**Completely remove AC power plug from the wall and allow 30 minutes
for the high voltage capacitors to discharge through bleeder resistors
before attempting to change tubes or clean the
inside to the preamplifier.**

CAUTIONS


Never remove/insert AC plug when the unit is on or the AC power switch is in the "ON" position

Obstruction of the top portion of the SLP-98 will result in tubes overheating

PROPRIETARY RIGHTS: Cary Audio Design has proprietary right in the design and components of its units. While the purchaser is entitled to use the unit for its intended purpose, use of the unit for its intended purpose, use of the unit for copying, imitation, or reverse engineering is a violation of these proprietary rights and is forbidden.

SLP - 98

Amplifier - Speaker connection

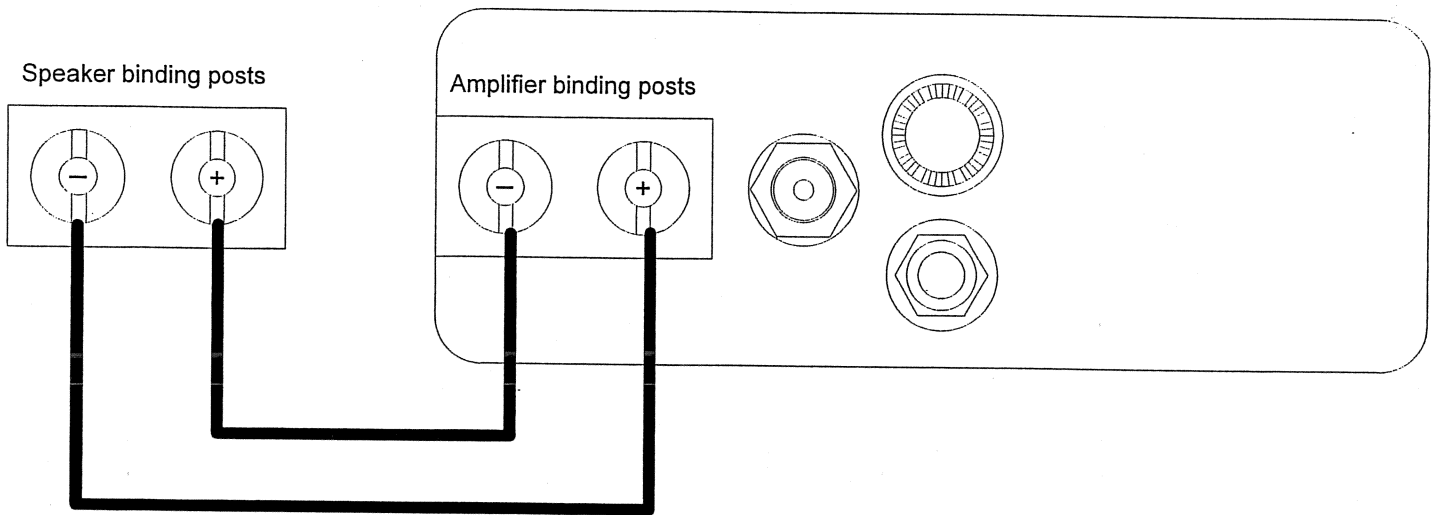

- The SLP-98 (line & phono) preamplifier is phase inverting.
- This will require you to connect the positive speaker terminal to the negative binding post on your amplifier. The negative speaker terminal will connect to the positive binding post on your amplifier.

UNITED STATES LIMITED WARRANTY

Cary Audio Design, Inc. warrants to the original United States purchaser for use in the United States, that this product shall be free from defects in material (except tubes and AF output transistors) or workmanship for three (3) years from the date of the original purchase. Failure to register warranty will limit the warranty of one year.

During the warranty period, Cary Audio Design or an authorized Cary Audio Design service facility will provide free of charge both parts (except tubes and AF output transistors) and labor necessary to correct defects in material or workmanship.

To obtain such warranty service, the original purchaser must:

- (1) Complete and send in the warranty Registration Card.
- (2) Notify Cary Audio Designs as soon as possible after the discovery of a possible defect:
 - (a) The model number and serial number;
 - (b) The identity of the seller and the approximate date of purchase;
 - (c) A detailed description of the problem, including details on the electrical connection in the associated equipment and the list of such equipment.
- (3) Deliver the product to Cary Audio Designs or the nearest authorized service facility, or ship the same in its original container or equivalent, fully insured and the shipping charges prepaid.

Correct maintenance, repair and use are important to obtain performance from this product. Therefore, carefully read the Instruction Manual. This warranty does not apply to any defect that Cary Audio Design in its sole discretion determines is due:

- (1) Improper maintenance or repair, including the installation of parts or accessories that does not conform to the quality and the specifications of the original parts.
- (2) Misuse, abuse, neglect or improper installation.
- (3) Accidental or incidental damage.

WARRANTY DISCLAIMER

Except for the express warranties stated herein, Cary Audio Design disclaims all other warranties including, without limitation, all implied warranties of merchantability and fitness for a particular purpose.

EXCLUSIVE REMEDY

Notwithstanding the foregoing, the purchaser's exclusive remedy for any breach of warranty, express or implied, is limited to the repair or replacement of the defective unit or the refund of the purchase price, at the option of Cary Audio Design. Under no circumstances is Cary Audio Design liable for incidental or consequential damages. Any implied warranties imposed by law terminate one (1) year from the date of purchase.

FOREIGN PURCHASERS

Cary Audio Design warrants its merchandise to purchasers in the United States for use in the United States. It provides no other warranties. If you are a foreign purchaser, consult with your dealer to determine whether your dealer provides any warranty.

The foregoing constitutes Cary Audio Design's entire obligation with respect to this product, and the original purchaser and any user or owner shall have no other claim for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to you.

This warranty gives legal rights and you may also have other rights which vary from state to state.

CARY

Audio Design

111-A Woodwinds Industrial Court
Cary, NC 27511
USA

Phone: 1-919-481-4494

Fax: 1-919-460-3828

www.caryaudio.com

info@caryaudio.com